



Ford

Escort / Fiesta / Orion / Mondeo (Non-Hydraulic Type)

CLTB 0005

RELEASE BEARING FITMENT INSTRUCTIONS

Concerns

The release bearing must be removed and replaced in accordance with the following instructions to ensure a correct fitment.

Method

- 1** Unscrew bolt to free fork pivot
- 2** Swivel fork forwards to remove bearing from guide tube and then swing bearing forward and upwards to release from locating rollpin
- 3** **DO NOT** try and refit the release bearing with the bolt in place
- 4** Locate bearing on rollpin
- 5** Swing bearing downwards to engage on guide tube
- 6** Refit and tighten bolt

