

# Blue Print Top Tip

## Nissan Navara Fuel Pump ECU Reset

Date Issued: 03/2013

1. Take the vehicle for a drive until the engine is up to operating temperature
2. Turn everything off and keep the doors shut
3. Turn on the ignition so that all the dash lights come on
4. Wait 3 seconds
5. **PUMP** the accelerator pedal 5 times within 5 seconds
6. With your foot now **OFF** the accelerator wait 7 seconds
7. After 7 seconds **PRESS AND HOLD** down accelerator pedal for 10 seconds
8. After 10 seconds the Engine Management Light will start to flash. At this point remove your foot from the accelerator
9. The vehicle is now in DIAG mode, so let the EML flash for a while
10. **PRESS AND HOLD** the accelerator pedal down for more than 10 seconds. This will then reset the ECU and fuel pump and put them into learning mode
11. **NOTE:** When the EML light is flashing, this is listing possible fault codes. If you know how to read the fault codes or know the sequences you can figure out any possible faults with your vehicle without getting the dealer to do it!!
12. Fire up and go for a drive of approximately 5-10 miles



Disclaimer: Any technical tips are produced in good faith. Blue Print always recommend that vehicle maintenance and diagnostics are only carried out by suitably experienced people using appropriate tools in a safe manner within a workshop environment. Blue Print and their customers cannot be held responsible for the correctness of, or misinterpretation of the above technical tips. Images shown are for illustrative purposes only and may not be representative of the products or vehicles described.

[www.blue-print.com](http://www.blue-print.com)