

Continental timing belt guide Fiat Doblò 1.6D Multijet

Fiat 1.6 D Multijet diesel engines are installed in many vehicles. To ensure that the belt change operation goes smoothly, ContiTech experts provide a step-by-step explanation of the correct change procedure on a Fiat Doblò (263). The manufacturer recommends inspecting and, if necessary, changing the timing belt at 150,000 km or after five years, for vehicles without a particulate filter. In the case of vehicles with a particulate filter, inspection after 140,000 km or five years is recommended. Replace the tensioning pulley, idlers and water pump at the same time as changing the timing belt. The labor time is 2.7 hours.

Preparatory work

Disconnect the vehicle battery. Do not turn the crankshaft and camshaft once the timing belt has been removed. Always turn the engine in the normal direction of rotation (clockwise).

Turn the engine ONLY at the crankshaft pulley and not at other pulleys. Comply with all tightening torques.

Jack up and prop the front of the vehicle. Remove the: engine cover, engine compartment underpanel, front right wheel, engine compartment underpanel right, ancillary unit belt plus tensioning pulley and idler of ancillary unit belt, air intake hose

from air filter housing and air filter housing, air intake pipe from turbocharger, air flow sensor, engine mount bolts, engine mount and timing belt guard. Locate engine support beam.

Camshaft belt removal

1. Remove cover from flywheel and insert locking tool (186089000) into flywheel (Figs. 1a & 1b).





- 2. Unscrew crankshaft pulley bolts and remove crankshaft pulley.
- 3. Remove locking tool (186089000) from flywheel.
- 4. Set valve timings to mark.
- 5. Disconnect plug of fuel pressure sensor so that bolt can be removed from camshaft housing (Fig. 2). Unscrew bolt from crankshaft housing.



6. Insert locking tool (1870896900) into camshaft housing (Fig. 3).



- 7. Remove bolt from crankcase cover left next to crankshaft pulley and place gauge (2000003000) on crankshaft pulley (Fig. 4).
- 8. After checking the valve timing setting, the gauge can be removed again and tensioning pulley can be released by



loosening tensioning pulley bolt. The timing belt can now be removed.

Camshaft belt installation

- 1. Fit new tensioning pulley and idlers.
- 2. Loosen camshaft pulley by mounting counterhold (1870815000) on camshaft pulley and loosening the camshaft bolt (Fig. 5).
- 3. Camshaft locking tool (counterhold) (1870836000) is inserted (Fig. 5).




- 4. Fit timing belt on crankshaft pulley, starting clockwise. Take care to ensure that timing belt is not creased during fitting! Timing belt must be tight between pulleys on tight side! Markings on timing belt must align with markings on camshaft pulley, crankshaft drive pulley and high-pressure pump pulley (Fig. 6).
- 5. Then place gauge (2000003000) on

Continental timing belt guide Fiat Doblò 1.6D Multijet

continued

crankshaft pulley again, secure with bolts and check valve timings.
6. Press tensioning pulley spring down using screwdriver until tensioning pulley pointer is aligned with bore (Figs. 7a and 7b).

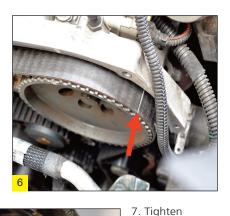





engine travel.
Set engine to
TDC cylinder 1.
Insert camshaft
locking tool and
crankshaft pulley
gauge. If locking
tool cannot be
inserted, correct
the valve





timings. Check timing belt tension again.

11. Remove locking tools and gauge, locate and tighten screw plug with the new o-ring in camshaft housing again (13-16 Nm). Remove holding tool and fit components in reverse order of removal.

12. Fitting: timing belt guard, crankshaft pulley (tightening torque 23-28 Nm), ancillary unit belt plus tensioning pulley and idler for ancillary unit belt, engine mount bolts and engine mount, air intake hose from air filter housing and air filter housing, air intake pipe from turbocharger, air flow sensor, engine cover, engine compartment underpanel, front right wheel and engine compartment underpanel right.

13. Record changing of original ContiTech timing belt on sticker supplied and stick this in engine compartment.

