



## Alfa 156 All models

### Fuse box cover comes loose.

If there are complaints with this vehicle that the fuse box cover comes loose, one possible cause is the lack of tension force of the retaining clips. To eliminate the problem, a modified cover with a retaining screw (Fig. 1) must be installed. To do this proceed as follows:

- Remove the old cover.
- Remove the plastic washer from the retaining screw of the new cover and pull the screw out (Fig. 2).
- Install the cover and mark the dashboard through the hole for the retaining screw.
- Take the cover off again and drill an 8 mm hole at the spot marked on the dashboard.
- Attach a metal clip with thread above the bore hole (Fig. 3).
- Insert the retaining screw and plastic washer back into the cover and install the cover.
- Tighten the retaining screw.



Fig. 1



Screw with  
plastic washer

Fig. 2



Metal clip  
with thread

Fig. 3