



Audi TT

Bulb replacement, combination rear lamp

To replace the bulbs in the combination rear lamps it is necessary to remove the respective tail lamp. To do this proceed as follows:

- Open the recess in the side of the boot trim
- Unscrew the knurled screws (Fig. 1, Item A)
(If these cannot be unscrewed by hand – loosen using a 6 mm hexagon key)
- Pull the combination rear lamp (Fig. 2, Item A) backwards until the retaining pin has loosened from the clip (Fig. 2, Item B)

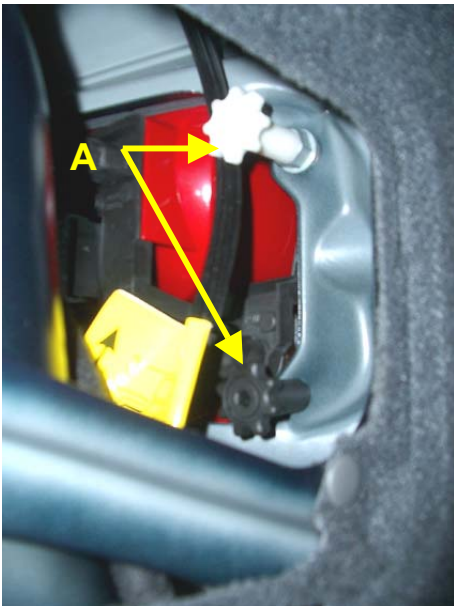


Fig. 1

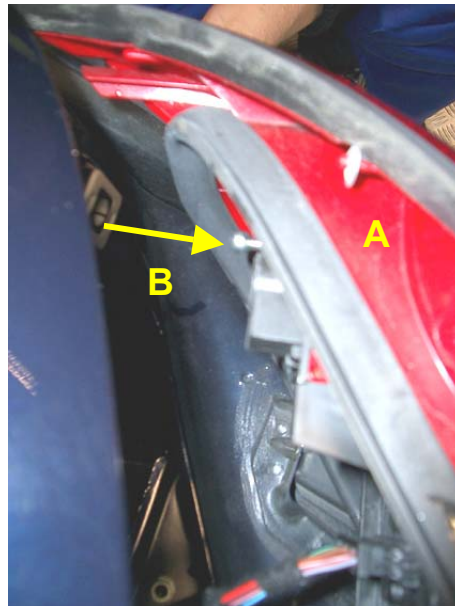


Fig. 2