



Audi TT With 1.8 l engine and xenon light

Replacing the front indicator bulbs.

In order to replace the front indicator bulbs, a few other components have to be removed as well. The following list shows the necessary working steps on the respective side of the vehicle (in the direction of travel):

Right-hand side:

- Remove the plastic trim in the engine compartment by loosening the 3 clips (a) and the screw (b) (Fig. 1).
- The indicator socket is underneath the xenon ballast (Fig. 2).
- The indicator socket is loosened by being turned anti-clockwise.



Clip (a) Screw (b)
Fig. 1



Indicator socket
Fig. 2

Left-hand side:

- Remove the trim covering the battery by loosening the 3 screws (a) (Fig. 3).
- The indicator socket is directly beneath the xenon ballast (Fig. 4) and is also loosened by being turned anti-clockwise.
- To make access to the indicator socket easier, the air filter box should be removed completely (Fig. 5).



- To do this, loosen the two screws (a), the suction pipe (b), the plug on the mass air flow meter (c) and the plastic hose (d) and lift out the air filter box completely (Fig. 6).



3 screws
Fig. 3

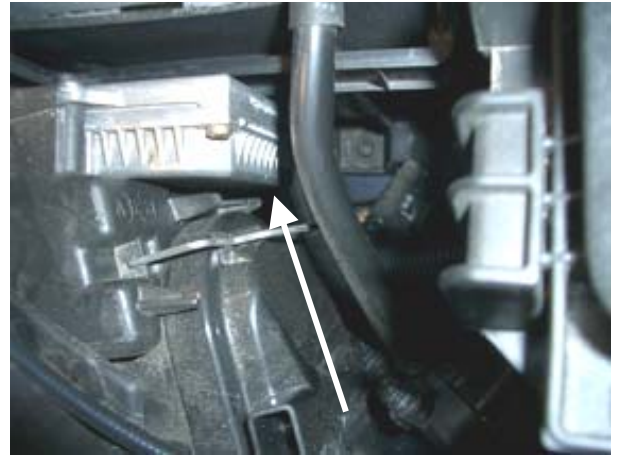


Fig. 4



Fig. 5

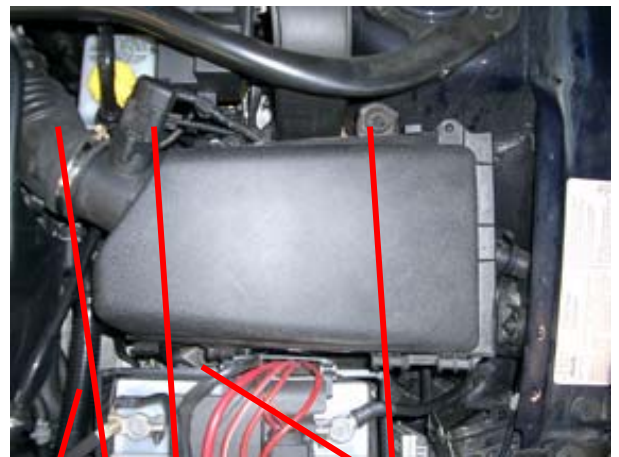


Fig. 6