



BMW 7-Series (E 38) All models

Check Control displays "Check brake light"

If there are complaints with this vehicle that the Check Control permanently displays the message "Check brake light", one possible cause is a faulty PCB on the combination rear lamps. In this case the PCB chars at the contact points at the base of the brake light. This can be identified by looking for clear signs of melting. This leads to contact faults which the Check Control recognizes.

For the fault to be eliminated, the complete faulty combination rear lamp must be replaced by a new one with a modified PCB.

Bulletin