



## ***BMW E 39 all models with automatic air conditioning***

### **Interior blower continues to run after the ignition has been switched off**

If the complaint is that the interior blower continues to run after the ignition has been switched off, leading to the battery discharging, one possible cause could be a faulty blower transistor.

To eliminate the fault, the blower transistor must be replaced. This blower transistor is situated in the air channel on the right, behind the cover of the storage compartment. In addition, the trim under the glove compartment has to be removed.

**Bulletin**