



BMW E 36 / 318 tds (M 41)

Battery charge indicator illuminates after engine start.

If after the engine has started the battery charge indicator illuminates or dims, a possible cause could be the mini switch relays responsible for generator switch off during engine start.

To rectify the problem consider the following steps:

- Open the fuse box in the engine bay.
- Pull off the additional cover of the relays.
- Change the two small grey relays.
- Refit the cover.
- Check the system for correct function.

Bulletin

