



BMW E39 all models

Blower of the interior temperature sensor runs permanent.

In the climate control unit a small blower for the interior temperature sensor is fitted. When the engine and radio is switched off the blower can be heard, especially at low temperature. When the ignition key is pulled off the blower runs for 16 minutes and is switched off by the consumer unit. If a vehicle door is opened the is blower switched on. This give the impression that a fault is present and the blower runs all the time. But this process is normal and should be explained to the customer if he has complained about this.



Blower for interior temperature sensor

Bulletin