



Ford Focus II 1.6i From model year 11.04

Replacing the light source

Since the working steps are identical for both sides for this vehicle, they are explained using one side as an example.

Low beam, high beam and parklight:

- Unscrew the attachment screw (Torx 30) from the headlight (see Fig. 1).
- Reach behind the headlight with one hand. Then pull the headlight forwards firmly in one go and remove it from the bodywork (see Fig. 2).
- Separate the plug connection at the headlight. Use a screwdriver to loosen the catch and then pull the central plug off (see Fig. 3).
- Press the locating lugs on the headlight cover out of their holders and remove this (see Fig. 4).
- The respective bulb can now be replaced (see Fig. 5).

Indicator:

- Remove the headlight as described above.
- Turn the bulb base anticlockwise as far as it will go and then remove it from the headlight together with the bulb (see Fig. 6).

Replace all the removed components in reverse order. When inserting the headlight make sure that the two bottom headlight holders (see Fig. 7) snap into the bodywork correctly again. Check the lighting system to make sure it is in perfect working order. Check the headlight setting and adjust if necessary.



Fig. 1



Fig. 2



Fig. 3

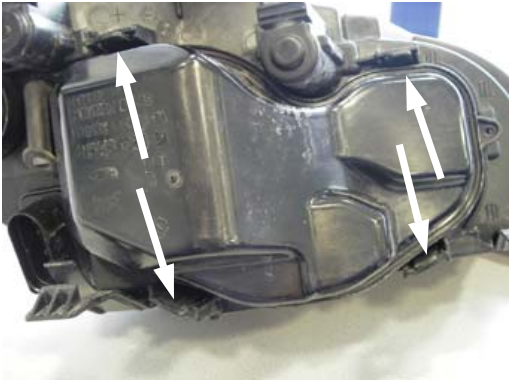


Fig. 4



Fig. 5



Fig. 6



Fig. 7