

© Hella KGaA Hueck & Co., Lippstadt



Ford Mondeo, all models from 2001

Failure or permanent illumination of the brake light.

If the brake light switch is not correctly fitted, the housing of the switch could be broken. Due to this the brake light doesn't light up or illuminates permanently. In this case the brake light switch must be renewed. If the brake light illuminates permanently, a basic adjustment between the contact pin of the brake light switch and the stopper plate on the brake pedal must be carried out. For that consider the following steps:

Basic adjustment

- Operate the brake pedal by hand.
- Pull off the contact pin of the brake light switch completely from the cam.
- Release the brake pedal.
- Check the brake light by operating the brake pedal several times.

Renewing the brake light switch

- Remove the plug from the brake light switch.
- Remove the locating clip.
- Turn the brake light switch clockwise and remove it.
- Refit the locating clip.
- Refit the new brake light switch and carry out a basic adjustment as described above.
- Operate the brake pedal by hand and turn the brake light switch anticlockwise.
- Release the brake pedal.
- Refit the plug.
- Check the function.





1-1