



## ***Honda Accord 2.2 CTDI Model year from 2003 With xenon light***

### **Replacing the light source**

When replacing the light source, proceed as follows. First switch the ignition off.

#### **Driver side:**

##### **Low beam:**

- Unscrew the screw from the earth strap (above the headlight) and place it to one side.
- Unscrew the screw (Resis Torx 20) from the cover cap and turn this to the left as far as it will go (see Fig. 1).
- Remove the cap.
- Turn the ignition module to the left as far as it will go and remove it from the xenon bulb (see Fig. 2).
- Loosen the spring-wire clamp and replace the xenon bulb.

##### **High beam:**

- Push the pressure pins of the expansion clips downwards and take the clips out of the cover (see Fig. 3).
- Remove the cover upwards.
- Remove the plug from the bulb and remove the rubber cap from the rear of the headlight housing (see Fig. 4).
- Take the bulb holder with the bulb out of the reflector.
- Pull the bulb out of the base and replace it.

##### **Indicator:**

- Remove the cover as described for the high beam.
- To be able to reach the bulb more easily, turn the headlight-range adjustment motor to the left as far as it will go. However, do not remove the motor (see Fig. 5).



- Remove the plug from the bulb base and turn this to the left as far as it will go (see Fig. 6).
- Take the base with the bulb out of the reflector and replace the bulb.

## **Parklight:**

- Loosen and remove the fastening clips of the mudguard panelling (see Fig. 7).
- Pull the panelling downwards as far as necessary to reach the parklight bulb.
- Turn the bulb socket to the left as far as it will go and remove it from the headlight (see Fig. 8).
- Replace the bulb.

## **Passenger side:**

### **Low beam:**

- Unscrew the fastening screw from the filler neck of the water tank (see Fig. 9).
- Remove the upper part of the filler neck (see Fig. 10) and push the lower part as far backwards as necessary to reach the cover cap easily.
- Then proceed according to the instructions for the driver side.

### **Indicator:**

- To reach the indicator bulb better, loosen the hose clamp and turn clockwise through 90° (see Fig. 11).
- Open the mounting of the hydraulic line and push this backwards slightly (see Fig. 12).
- Turn the bulb socket to the left as far as it will go and remove it from the headlight.
- Replace the bulb.

### **Parklight:**

- See driver side.

The high beam is straightforward to replace on this side. Refit all the removed parts in reverse order. Check the lighting system to make sure it is in perfect working order. Check the



headlight aim with the aid of a diagnosis tester if necessary (fault-code readout, basic setting of headlight range adjustment etc.).



Fig. 1



Fig. 2

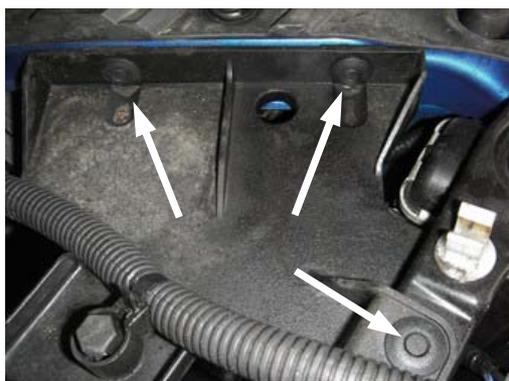


Fig. 3



Fig. 4



Fig. 5



Fig. 6



Fig. 7



Fig. 8



Fig. 9



Fig. 10

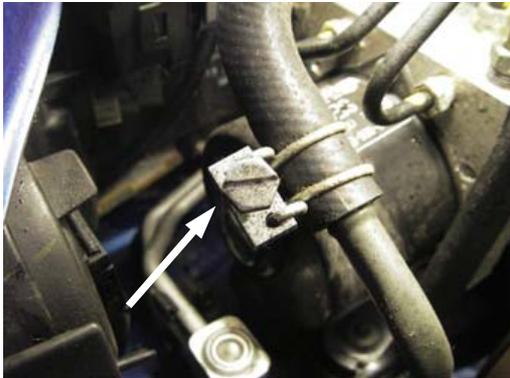


Fig. 11



Fig. 12