




Headlamps and lights

Humidity

To prevent the formation of humidity in headlamps and lights, the following notes should be considered:

- When changing headlamps and lights the seals have to be replaced in the plug connections and servomotors
- Take care that available seals are not damaged or lost when working on lamps and lights
- Take care when underbody washing and/or engine cleaning that the jet of water is not directly pointed at lamps or lights
(water can easily enter via the ventilation openings)

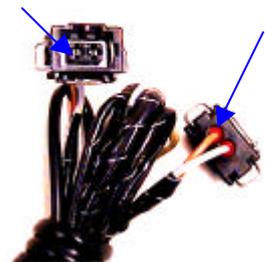

Please refer to the technical info:
Condensation of headlamp systems