



## Opel Astra 1.6

### Bulb replacement

In order to replace the bulbs of the above-mentioned vehicles, proceed as follows:

#### Driver side:

- Remove the service flap in the wheel housing (see Fig. 1).
- Pull the rubber cap off the headlight housing (see Fig. 2). Now the bulb for the parking light and low beam light can be replaced.
- To replace the indicator bulb, remove the upper cap.
- To reach the high beam bulb, the battery cover has to be removed first. The rubber cap can now be reached easily (see Fig. 3).

#### Passenger side:

- Replacement is identical for low beam, parking light and indicator.
- To reach the high beam bulb, the suction hose has to be pulled off the air filter housing and bent downwards (see Fig. 4). The rubber cap can then easily be reached (see Fig. 5).

Replace the parts in a sensible order. Then check the headlight setting and adjust if necessary.



Fig. 1



Fig. 2

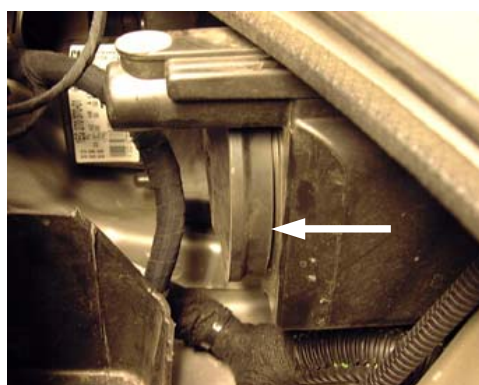


Fig. 3



Fig. 4

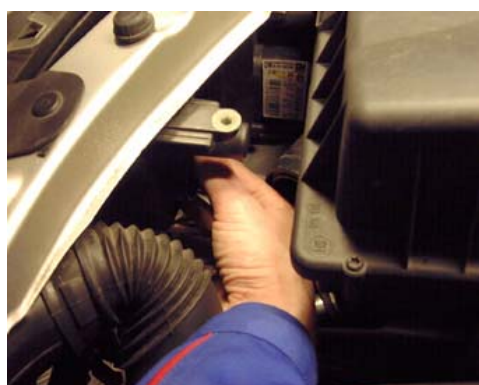


Fig. 5