



Opel Sintra All models

Interior lighting doesn't switch off automatically.

If there are complaints with these vehicles that the interior lighting doesn't switch off automatically after the doors have been closed, the following causes are possible:

1. Contact problems on the door contact switch of the sliding doors.
2. Damaged cable strand under the passenger seat.
3. Dimmer switch of the dashboard lighting has been turned beyond the notch settings.
4. Damaged cable strand on the roof lining near the cut-out for the luggage net.

To eliminate the fault the dimmer switch and cable strands should be checked and serviced/renewed if necessary. The contact problems on the door contact switches of the sliding doors can be eliminated by cleaning and bending the pins.

Bulletin

