



Renault Twingo (C06/S06)

Replacing the air distributor control knob

With the above-mentioned vehicles the control knob for air distribution (drawing, pos. 1) on the heating/air conditioning operating unit can break. This affects operating units with a blue control knob. This can be replaced without having to remove the whole operating unit. To do this, prise the faulty control knob off with the aid of a valve adjustment measuring gauge (0.4 mm) as follows:

- Push the measuring gauge between the operating unit and the control knob (drawing, pos. 2)
- Pull the measuring gauge forwards and pull the control knob forwards at the same time.
- Move the measuring gauge through 180° and repeat the procedure until the control knob can be pulled off
- If appropriate, pull residue off the control axle or push it to the back
- Insert new control knob

