

© Behr Hella Service GmbH, Schwäbisch
Hall/Germany

12. June 2009

Rover 75

Expansion valve

With the above-mentioned vehicles, there can be problems with both searching for spare parts and with the installation location when looking for the expansion valve.

The expansion valve is extremely difficult to purchase on the independent parts aftermarket, which means it usually has to be purchased through Rovers dealers. The expansion valve is not easy to find in the spare parts list, either, but it is available as an individual part.

To reach the valve, the trim has to be removed in the driver's footwell (Fig. 1). Since the expansion valve is insulated (Fig. 2), it cannot be recognised immediately. The insulation has to be removed before the valve can be replaced (Fig. 3). In vehicles for left-hand traffic (RHD), the expansion valve is on the opposite side and thus on the driver side.



```
Fig. 1
```





Fig. 2

Fig. 3





1-1