



## **Skoda Superb, 1.9L TDI**

### **Light source replacement**

To replace the light source in the above-mentioned vehicle, proceed as follows:

- Remove the cover from the brake fluid tank. To do this, loosen the fittings under the cover by hand (see Fig. 1)
- Push the locking hoop on the headlight housing cover upwards and remove the cover.
- Remove the plug from the bulb, dismantle the retaining spring and replace the bulb.
- To reach the back of the right-hand headlight, the screws from the intake air channel have to be dismantled first.
- Remove the screws (see Fig. 2).
- Remove the screw covers and the screws (see Fig. 3).
- Remove the plastic cover.
- Pull the air channel upwards and off the air filter box (see Fig. 4).
- Remove the attachment screw from the air filter box (see Fig. 5)
- To reach the headlight housing cover better, push the air filter box approx. 5cm to the right and lock it in this position.
- Replace the bulb in the same way as on the left-hand side (see Fig. 6).
- Parking light, indicator and driving light can be replaced easily.
- Replace the removed parts in reverse order.
- Check the system for perfect function.
- Adjust the headlights.



Fig. 1

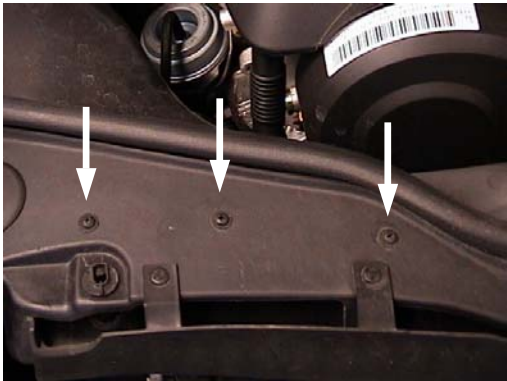


Fig. 2

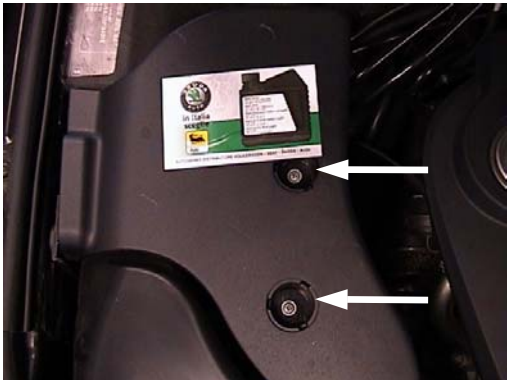


Fig. 3

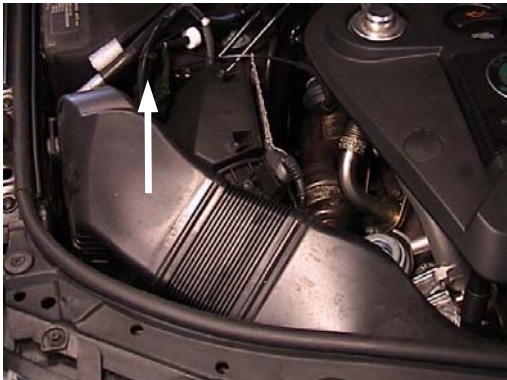


Fig. 4

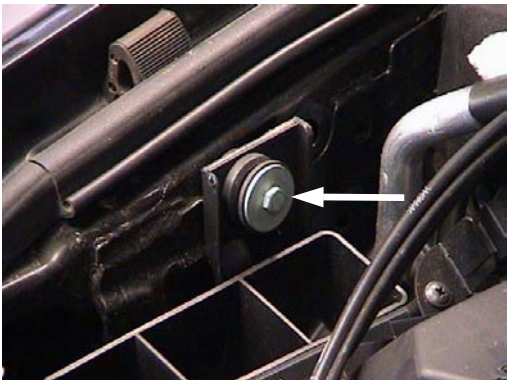


Fig. 5



Fig. 6