



## VW Golf 5

### Interior filter

The interior filter is now inside the above-mentioned vehicles. The filter is fitted below the glove compartment and can be reached via the footwell on the passenger side. To replace it, proceed as follows:

- Loosen trim "A", Fig. 1, below the glove compartment (to do this unscrew the two plastic screws, see Fig. 1)
- Remove the trim (we recommend also removing cover "B", see Fig. 1)
- Push the filter housing cover to the right and remove it
- Pull the filter out downwards
- Insert a new filter and refit the cover, making sure the installation position of the filter and the cover are correct. The covers "locating lugs" have to correspond to the recesses in the filter (Fig. 2).
- Refit trim

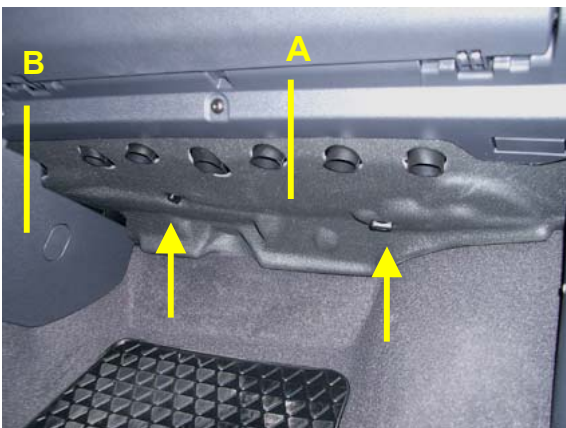


Fig. 1



Fig. 2