



Alistair Mason, Schaeffler

LuK Clutch Academy

Audi A5 2.0 TFSI Quattro

In this month's Schaeffler LuK Clutch Academy, REPXPERT Alistair Mason is replacing the clutch in an Audi A5 2.0 TFSI Quattro that has covered just over 44,000 miles, indicating that the vehicle does short trips with a lot of stop start driving. With a scheduled repair time of 5.5 hours and full repair instructions available on REPXPERT, this makes a great repair for any independent workshop.

Workshop equipment

- Vehicle lift (two post is ideal)
- Transmission jack
- Self-adjusting clutch tool

Gearbox removal

Place the vehicle on the lift, remove the space saver wheel from the boot and disconnect the battery earth lead, but do not close the boot as it is electrically actuated!

Raise the vehicle lift to gain access to the underside, remove the engine and gearbox undertrays, and then their metal mounting brace, followed by the exhaust system. Disconnect the steering column from the steering rack (note - marking its position may help with alignment on installation).

Disconnect both front driveshafts from the gearbox and remove the driveshaft protector on the O/S, then the gear linkage and stabiliser bar can be disconnected and stowed to one side. Separate the electrical multiplugs from the gearbox and position the loom away from the gearbox. The clutch slave cylinder can now be removed from the bellhousing, so clamp the two coolant pipes that pass into the bottom of the gearbox (Fig 1) and then disconnect from the gearbox.



Remove the black plastic blanking cover from the bottom of the bellhousing, this will now give access to the flywheel to drive plate bolts that need to be removed (Fig 2). Remove the three bolts, position a transmission jack under the gearbox to support its weight and remove the gearbox mounting. Disconnect the propshaft from the



differential by removing the six bolts and remove the centre bearing bracket, which will allow the propshaft to slide away from the differential and hang down.

The steering rack needs to be lowered to gain access to the lower bellhousing bolts. Disconnect and lower the anti-roll bar, which allows the steering rack bolts to be removed and the steering rack lowered. With the gearbox supported, remove the bellhousing bolts while taking care to note their position. The gearbox can now be eased away from the engine and once clear, lower the transmission jack and then position the gearbox safely.

Clutch replacement

With the gearbox positioned safely, remove the three bolts that retain the bellhousing driveshaft and then remove the driveshaft from the bellhousing (note – this bearing should be a good fit in the casing, but if the bearing is loose, it will need to be rectified, as it will cause a rattling noise). With the driveshaft removed, the clutch and flywheel assembly can now be lifted off the gearbox input shaft and removed from the bellhousing.

During this repair, when the clutch was unbolted from the DMF, clutch slippage was evident, as the face of the DMF was 'blued' (Fig 3), at which point the customer was advised that the DMF also needed replacement and their authorisation given.



Remove the clutch release arm and bearing assembly to allow the bellhousing area to be cleaned with clutch and brake dust cleaner. Replace the release bearing guide tube supplied in the LuK RepSet clutch kit, mount the new release bearing onto the release arm and refit the release arm.

Apply a light smear of high melting point grease to the gearbox input shaft splines and then slide the clutch plate onto the input shaft, which will ensure the clutch plate is correct and evenly distribute the grease. Remove the clutch plate and wipe off any excess grease.

Place the new clutch plate onto the flywheel, ensuring it is the correct way round as indicated by the 'Gearbox side' notification. Centralise using the clutch plate alignment tool, align the pressure plate onto the dowels, mount the self-adjusting clutch tool and ease the pressure plate into the home position. Once in the correct position, insert three clutch retaining bolts and tighten, remove the self-adjusting clutch tool, fit the remaining three clutch bolts, tighten and torque to the manufacturer's specification.

The clutch and flywheel assembly can now be mounted into the input shaft. Once in position, support with the plastic tool supplied (Fig 4), insert the bellhousing driveshaft and secure it.



Gearbox installation

Before installing the gearbox, ensure the alignment dowels are located correctly and that all pipes, hoses and wires are clear of the bellhousing area, so they do not get caught as the gearbox is being installed. Using the transmission jack, bring the gearbox close to the engine/drive plate, align the gearbox and ease into position, securing it with a couple of easily accessible bell housing bolts. Now insert the three flywheel to engine drive plate bolts finger tight and then tighten to the manufacturer's specification.

Installation is in the reverse order of removal. After the battery lead is connected, reset electrical consumers as required and always carry out a road test to ensure a quality repair.

Information on Schaeffler products, fitting instructions, labour times and much more can be found on the REPXPERT workshop portal - www.repxpert.co.uk - the REPXPERT app, or by calling the Schaeffler REPXPERT hotline on (+44) 1432 265 265.