



Renault Trafic III 1.6 dCi

Replacing the rear combination lamps

CAUTION Risk of burns. The lamps may still have residual heat from previous operation.

Figure 1:

- Item 1 – 2 Direction indicators
- Item 3 – 4 Rear stop lamps

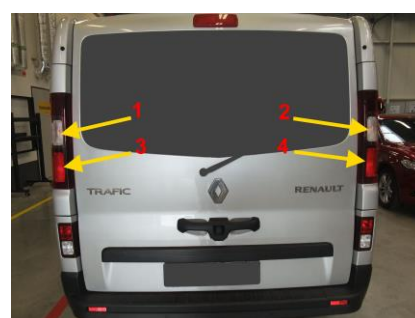


Figure 1

Replacing the rear combination lamps.

To replace the lamps, proceed as follows:

- Switch off the ignition and light switch
- Open the tailgate
- Loosen and remove screws (Figure 2)
- Carefully release the lamp from the retainer with a plastic wedge (Figure 3)
- Loosen the plug connection (Figure 4)
- Loosen the lamp holder in a counterclockwise direction (Figure 5 / 6) and remove



Figure 2

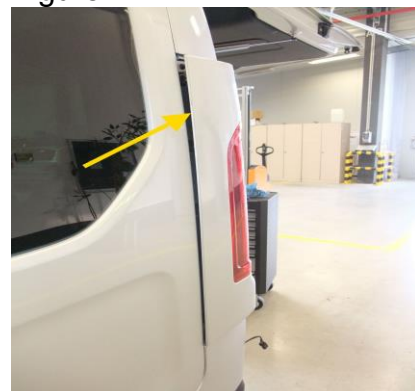


Figure 3

BULLETIN



Do not touch the glass bulbs of the lamps with bare hands (use a suitable soft cloth).

- Carefully remove the defective lamp from the base holder and replace with a new one
 - Direction indicator lamp = 12V 21W yellow
 - Rear combination lamp = 12V 21/5W
- Check function
- To fit the lamp, follow the removal steps in reverse order
- Once the lamps are fitted, check them again to ensure that they work correctly

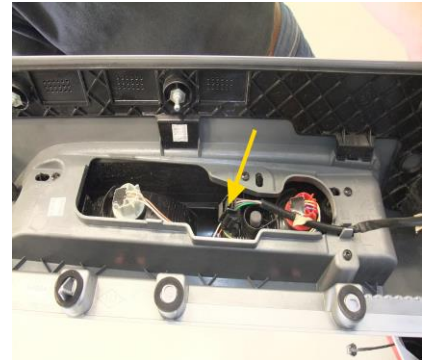


Figure 4



Figure 5



Figure 6