

Volvo

XC90

Model year: 2003 - 2004

Up to VIN: 079857

Cold air stream in the footwell



With the above-mentioned vehicles there can be a very cold air stream in the driver footwell when the air-conditioning is switched on. This occurs particularly when high outdoor temperatures are prevailing. In this case, a thin, L-shaped piece of foam should be glued to the back of the footwell air vents.

To do this proceed as follows:

- Remove the ventilation louvre in the driver's footwell
- Cut out the template (scale 1:1) and transfer the dimensions onto the foam
- Cut out the foam and use double-sided adhesive tape to stick it to the back of the ventilation louvre in such a way that the air flow opening is reduced by approx. 1/3
- Mount the ventilation louvre again

From VIN 079858 onwards, the ventilation louvre was modified by the vehicle manufacturer in such a way that the problem no longer occurs with these vehicles.

Bulletin

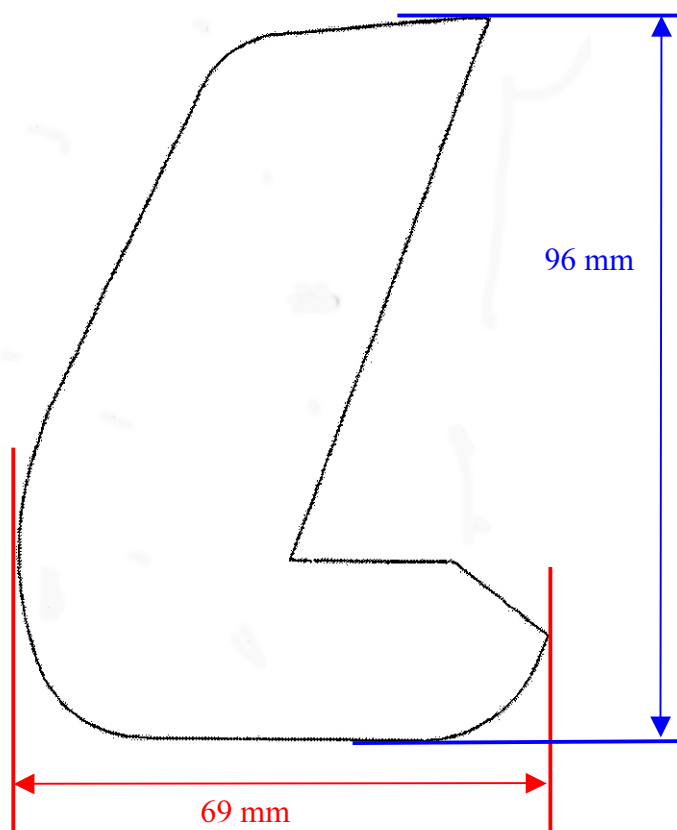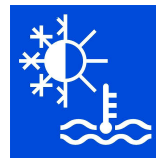

Template for ventilation louvre (scale 1:1)