



## VW Golf IV TDI

### Bulb replacement Main headlamp, left

The bulbs in the left-hand headlamp are difficult to access with this vehicle. In order to avoid dirt or damage occurring to the bulb glass, the following procedure should be followed during replacement:

- Note radio code
- Remove the battery cover (press unlocking mechanism on the right and left, Fig. 1 / Pos. 1)
- Disconnect negative and positive terminals from the battery (Fig. 2 / Pos. 2)
- Press the snap-in attachments on the left and right of the plastic bridge, Fig. 2 / Pos. 3
- Hinge the plastic bridge including electrical connections upwards (Fig. 2 / Pos. 4)
- Remove the battery holder (Fig. 2 / Pos. 5)
- Remove the battery
- Remove the 2 screws (Fig. 3 / Pos. 6) for the cover (Fig. 3 / Pos. 7) and pull the cover upwards and out
- Remove the cover cap (release clamp) from the headlamp (Fig. 4 / Pos. 8)
- Carefully remove the plug from the bulb
- Remove the bulb

Installation takes place in reverse order.

#### Do not forget:

- Enter the radio code again (if necessary)
- Reset the clock

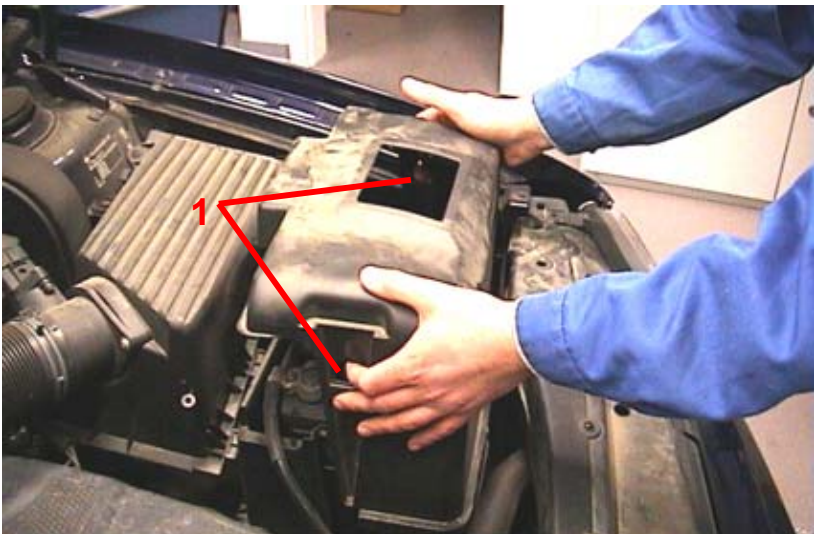


Fig. 1

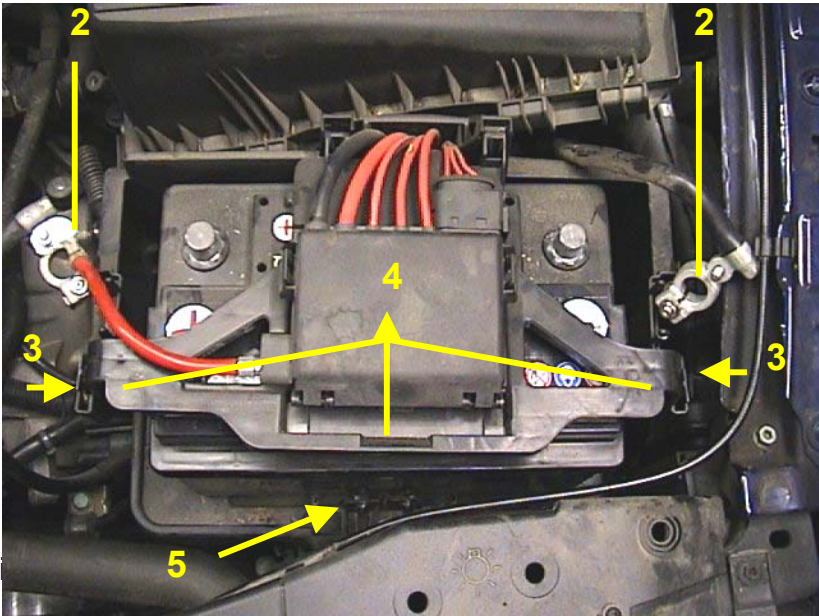


Fig. 2

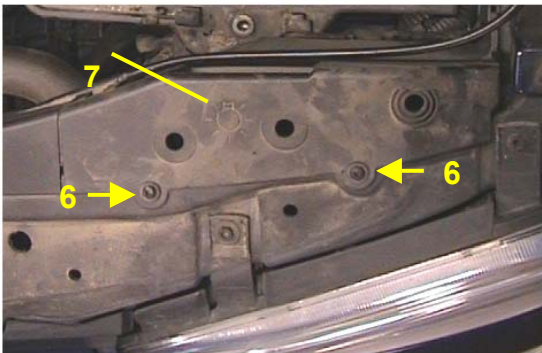


Fig. 3

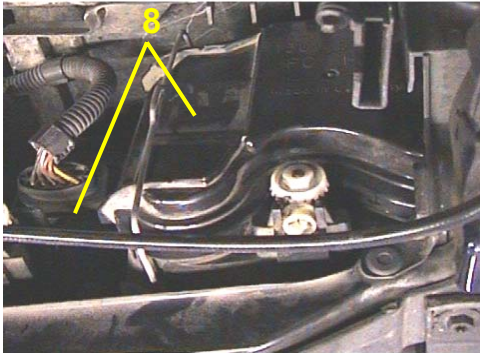


Fig. 4