



VW Passat (B5) 1.9 TDI

Replacing the bulbs

In order to replace the bulbs in the above-mentioned vehicle, proceed as follows:

Driver side:

- Loosen the cover on the brake fluid tank and remove it (see Fig. 1).
- Pull the cap off the rear headlight housing.
- Pull the plug off the bulb, dismantle the retaining spring and replace the bulb.

Passenger side:

- Unscrew the attachment screws from the intake air channel (see Fig. 2).
- Remove the cover caps from the attachment screws, unscrew these (see Fig. 3) and take off the plastic cover.
- Pull the air channel up and off the air filter box (see Fig. 4).
- Unscrew the attachment screw of the air filter box (see Fig. 5).
- To reach the headlight housing cap better, push the air filter box approx. 5 cm to the right and fix it in this position (see Fig. 6).
- Replace the bulb in the same way as on the driver side.
- Parking light, indicator and high beam can easily be replaced in both headlights.
- Reassemble the parts in a sensible order.
- Check the system for perfect function.
- Check the headlights and set if necessary.



Fig. 1

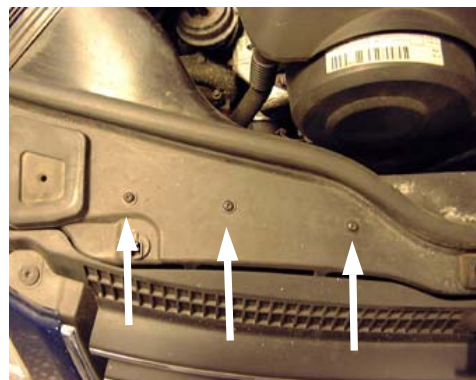


Fig. 2



Fig. 3

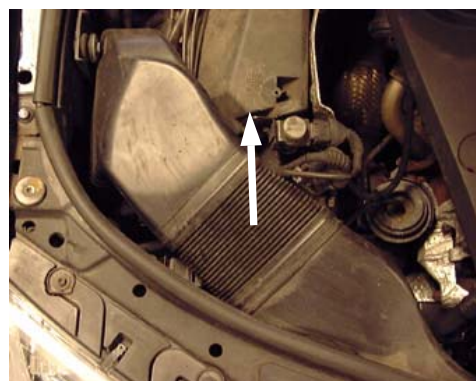


Fig. 4



Fig. 5

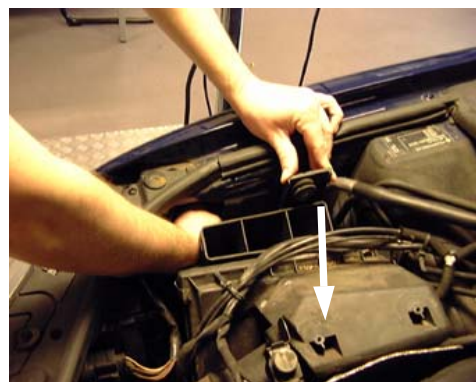


Fig. 6